


Bohrlehre 42490

Für Rosetten

34110 - 34118 / 36110
34130 - 34138 / 36130

34120 - 34128 / 36120
34180 - 34188 / 36180

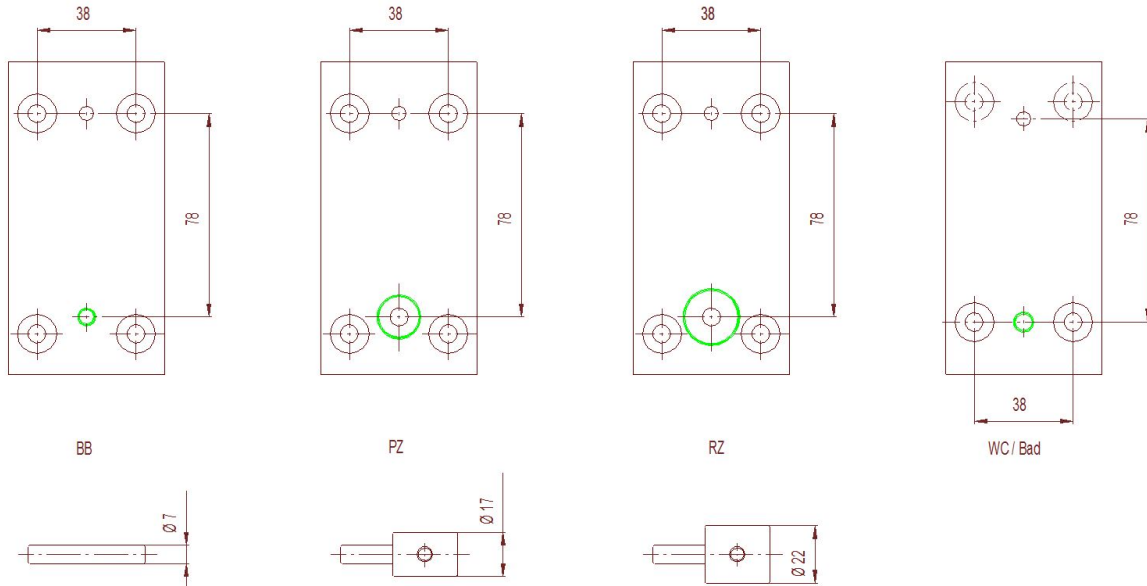


1. Drückerrosette bohren
2. Zentrierstift umschrauben
3. Lehre wenden



Für Rosetten

34110 - 34118 / 36110
34130 - 34138 / 36130

34120 - 34128 / 36120
34180 - 34188 / 36180

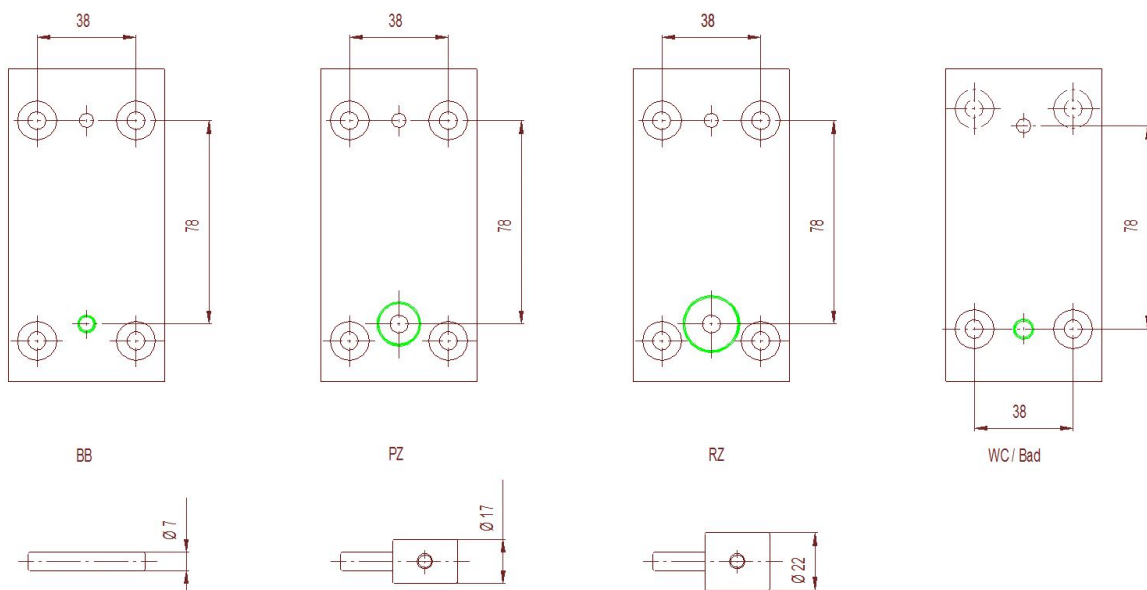

1. Drückerrosette bohren
2. Zentrierstift umschrauben
3. Lehre wenden

